


Specification

Rated Power:20W Peak Power:40W
Impedance:7.8 Ω ±10%
Resonant frequency / fs:480Hz±20%
Voice Coil diameter: 32mm
OD:51.0±0.3mm Thickness: 22.5±0.5mm
Test condition:8.94V,200Hz-20KHz,2 seconds
Power test: IEC268-5, 12.64V,48hrs
Operation temperature: -20 to +60°C
Weight: 137g ± 10%
Subject to technical modification


Application

The exciter will be glued onto a flat vibrating surface (e.g sound panel,table plate, plasterboard, ceiling panel or glass panel) so that the surface serves as a kind of speaker cone. In contrast to conventional speakers, exciter primarily excites bending waves on the surface to provide a wider radiation. Sound quality and volume depend on the material properties and the dimensions of the mounting surface.

Drawing

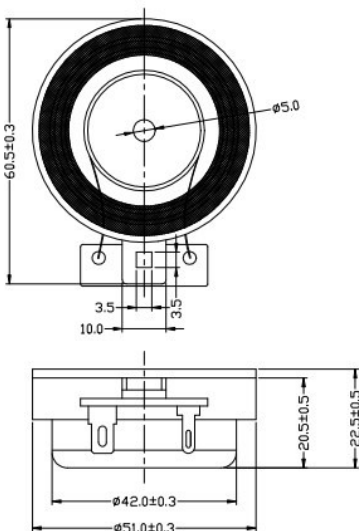

Impedance and frequency curve

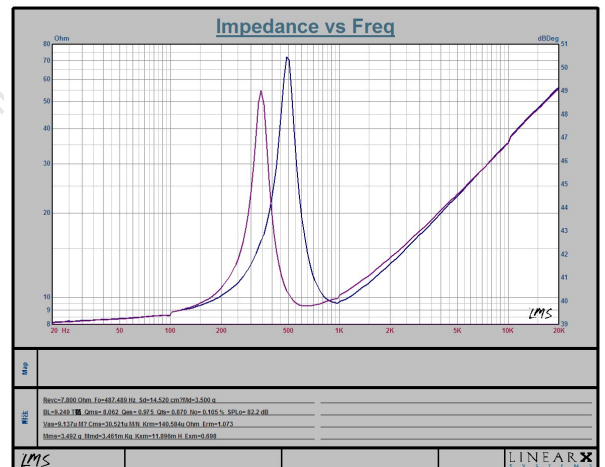

Installation

- 1) Before installing the exciter, make a test run to determine the exciter position for the best sound reproduction.
- 2) To install exciter, remove the protective film and then glue the exciter onto a clean, flat surface.
- 3) Switch off the amplifier prior to connecting the exciter.
- 4) Connect exciter to a speaker out-pu of the amplifier. When connecting exciters to a single output, make sure that they have the same polarity. Do not push the exciter below the minimum load impedance or overloaded

Note: Once the exciter has been mounted to a surface, use a knife to detach the exciter. Never pull the housing, or the exciter may be damaged. The exciter can be reused by changing the adhesive ring.