




**Application**

The exciter will be glued onto a flat vibrating surface (e.g sound panel,table plate, plasterboard, ceiling panel or glass panel) so that the surface serves as a kind of speaker cone. In contrast to conventional speakers, exciter primarily excites bending waves on the surface to provide a wider radiation. Sound quality and volume depend on the material properties and the dimensions of the mounting surface.


**Drawing**

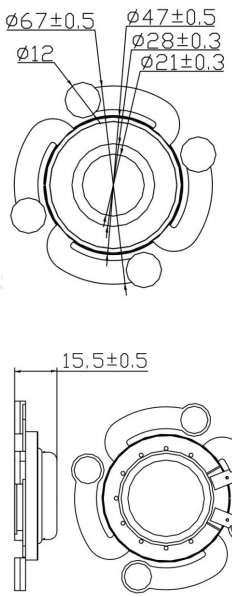

**Specification**

- Rated Power:5W      Peak Power:10W
- Impedance:3.6 Ω ±10%
- Resonant frequency / fs:300Hz±20%
- Voice Coil diameter: 25mm
- OD:67±0.5mm      Thickness: 15.5±0.5mm
- Operation temperature: -20 to +60°C
- Operation: 3V Sweep Time at 2s
- Power Test:IEC268-5/4.2V/48hrs
- Weight:50g±10%
- Subject to technical modification

**Impedance and frequency curve**

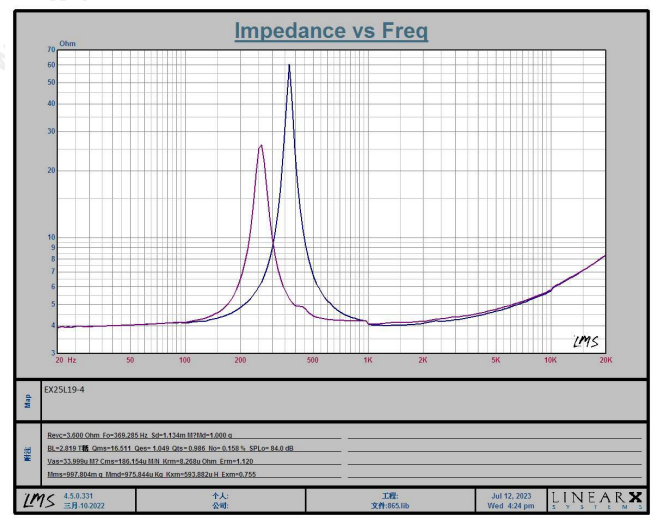

**Installation**

- 1) Before installing the exciter, make a test run to determine the exciter position for the best sound reproduction.
  - 2) To install exciter, remove the protective film and then glue the exciter onto a clean, flat surface.
  - 3) Switch off the amplifier prior to connecting the exciter.
  - 4) Connect exciter to a speaker out-put of the amplifier. When connecting exciters to a single output, make sure that they have the same polarity.
- Do not push the exciter below the minimum load impedance or overloaded

**Note:** Once the exciter has been mounted to a surface, use a knife to detach the exciter. Never pull the housing, or the exciter may be damaged. The exciter can be reused by changing the adhesive ring.